

ACUSTRIP®

**The Diagnostic
Detective™**



Rapid Mold / Bacteria Test

#84051

Quickly detect the presence of mold/bacteria.



ACUSTRIP®

The Diagnostic Detective™

Commercial Bacteria/Mold Test Kit Instructions for use


STEP 1: Remove cap with rod applicator.

STEP 2: Swipe surface to be evaluated with rod applicator.

STEP 3: Pour contents of small vial into larger vial.

STEP 4: Place rod applicator into vial & tighten cap.

STEP 5: SHAKE.

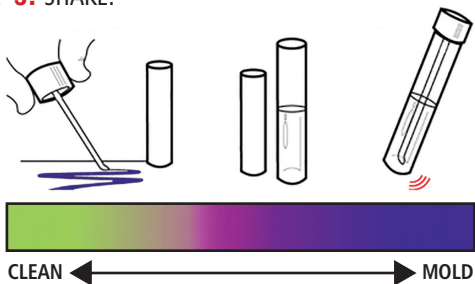

If the fluid stays green, the surface is clean. If the fluid turns purple, bacteria/mold is present based on the degree of purple. Prior to cleaning the affected surface, use the second set to make sure the surface is now clean.